
# **EN Solight TE09 Thermometer with cord**

#### **Operating Instructions**

Dear customer, thank you for purchasing our product. In order that we may serve you safely and to your complete satisfaction, please read and follow these instructions carefully. That way you can avoid inappropriate use or damage. Prevent the unauthorised use of this device and always respect all conventions applicable to the handling of electric appliances. Please carefully store these Instructions for Use. This device is intended exclusively for use in the household or inside a room. This product should only be used by adults. This product must never be exposed to high humidity (for example, in a bathroom) nor come into contact with fluids. Limit its proximity to or contact with household or computer equipment in order to prevent interference.

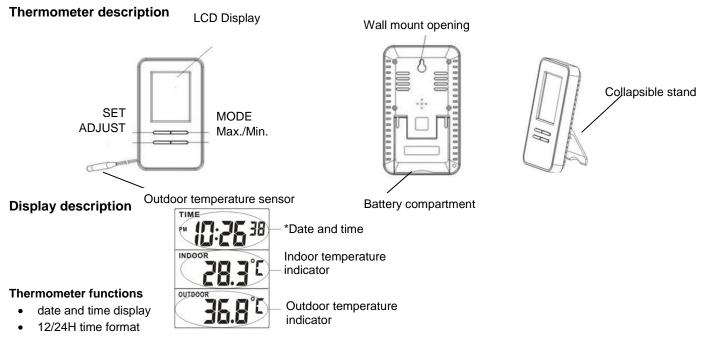

- temperature display in °C or °F
- memory min./max. value
- measuring indoor temperatures from -9°C to +50°C, measuring outdoor temperatures from -50°C to +70°C
- outdoor sensor on 1.5m-long cable

## Inserting the battery

- 1. Expand the stand, under which the battery compartment is located.
- 2. Open the battery compartment by sliding downward and insert 2x AAA 1.5V alkali batteries. Be sure to observe the polarity markings on the unit.
- 3. Close the battery compartment. Caution: improper handling can result in damage to the stand!

# Setting time

- 1. Press and hold the "SET" or "MODE" button for 2 seconds.
- 2. The active segment of the display will begin to flash. You can change the values by pressing the "ADJUST" or "Max./Min." buttons. If you press and hold either of these buttons for 2 seconds or more, you will be able to change the values at approx. 5 steps per second.
- 3. By pressing the "SET" or "MODE" button you will save the set value and continue to setting the next parameter.
- 4. The order of values for setup is as follows: Time zone > 12/24H > Hour > Minute > Year > Month > Day > °C/°F > Exit setup

### Measuring temperature

- 1. The exact indoor temperature is automatically displayed within 3 to 8 minutes of inserting the battery.
- 2. By repeatedly pressing the "Max./Min." or "ADJUST" buttons you can display measured values in the following order: minimum temperature > maximum temperature > current measurement.
- 3. When in max. or min. temperature display mode you can delete all saved temperature data by holding the "Max./Min." button.
- 4. You can display the date by briefly pressing the "SET" or "MODE" button when in standard mode.

## Caution:

- 1. When performing interval measurements of temperatures far below zero, e.g. -20°C and less, it is necessary to wait a longer period of time than with constant measurement. The cable sensor will reflect drops in temperature relatively rapidly to the thermometer during the first phase of measurement; however, precision results will be achieved only after 30-60 minutes. This applies in cases when you have removed the sensor from room temperature to freezing temperatures. If the sensor is continuously outdoors, however, the temperature will change periodically and will not result in the discrepancies mentioned above.
- 2. Remove any ice or frost from the cable sensor as it can influence the measured temperature.
- 3. Direct sunlight and other heat sources can have a negative effect on the measured temperature.